


### **ASSEMBLY INTRUCTIONS**

Large Two Door Storage Cabinet Model Number: UG21006

#### In the event of missing or damaged parts:

PLEASE CALL:949-713-3338 | customersvc@ulti-mategarage.com

NOTE: Do Not Call Retailer - Contact Manufacturer Direct For Faster Service.

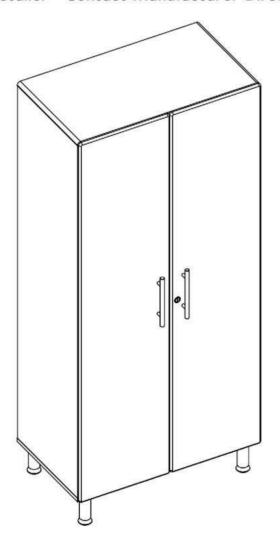

Ulti-MATE Garage | 30021 Tomas, Rancho Santa Margarita, CA 92688. T: 949-713-3338 | W: www.ulti-mategarage.com

## **PARTS LIST**

BASE CABINET MODEL: UG21006

# In the unlikely event of missing or damaged parts PLEASE CALL: 949-713-3338

WEB: www.ulti-mategarage.com

TOOLS NEEDED FOR ASSEMBLY





#	DESCRIPTION	QTY	IMAGE	#	DESCRIPTION	QTY	IMAGE
а	Top Panel	1		g	Back Panel	2	
b	Bottom Panel	1		h	Adjustable Shelf	2	
С	Side Panel	2	, , , , , , , , , , , , , , , , , , ,	3	Fixed Shelf	1	
				j	Left Door	1	
d	Top Spanner	1					
е	Middle Spanner	1		k	Right Door	1	
f	Bottom Spanner	1					

## **PARTS LIST**

BASE CABINET MODEL: UG21006


# In the unlikely event of missing or damaged parts PLEASE CALL: 949-713-3338

WEB: www.ulti-mategarage.com

#	DESCRIPTION	QTY	IMAGE	#	DESCRIPTION	QTY	IMAGE
aa	Logo	1	UITI-MATE	mm	Lock Hardware (Door)	1	000
bb	Pull	2	~	nn	Lock Hardware (Fixed Shelf)	1	
СС	Pull Screw 4*24mm	4		00	Screw 4*16mm	56	
dd	Cam	24		pp	Adjustable Foot	4	
ee	Metal Dowel	24		qq	Shelf Clip	8	
ff	Wooden Dowel	8		rr	Hole Cover	1	
jj	Screw 5*15mm	16		SS	Touch up Crayon	1	
kk	Hinge	8		tt	Screw 3.5*14mm	4	The same of the sa
II	key	2	SO				


#### **BEFORE YOU BEGIN**

CAM STYLE FASTENERS ARE USED THROUGHOUT THE ASSEMBLY OF THIS CABINET. ASSEMBLE ALL CAMS AS SHOWN BELOW.

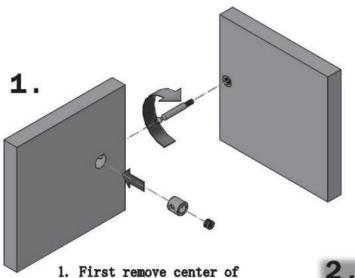


NOTE: After removing Cam(dd) screw, put in safe place. Make sure Cam is aligned as pictured and fully seated in hole. Test by inserting Metal Dowel (ee) into Cam. If Metal Dowel (ee) can' t fully be insreted into Cam. pull out Cam and with flat head screwdriver, gently scrape away and loose wood and reinsert Cam properly aligned.


Cam before inserting Cam outer ring into panel.





& HOLE FOR METAL DOWEL

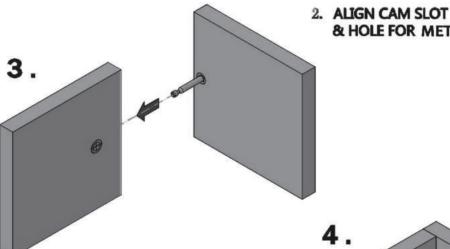



3. Install Metal Dowel (ee) into Cam outer ring before installing center of Cam into Cam outer ring(to prevent center of Cam blocking Dowel)

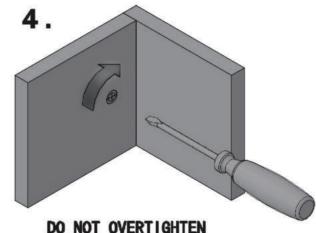

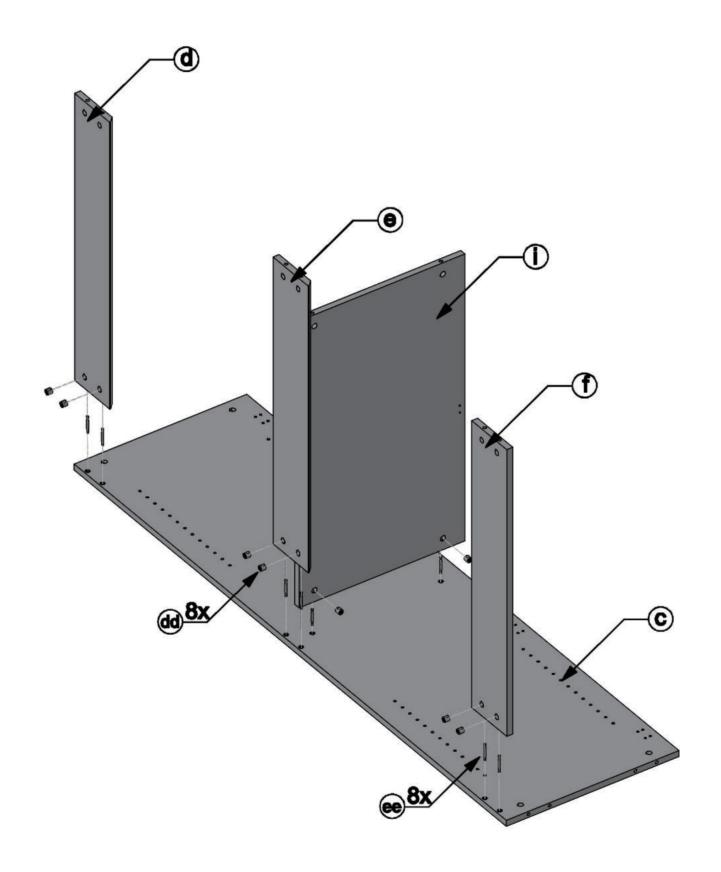

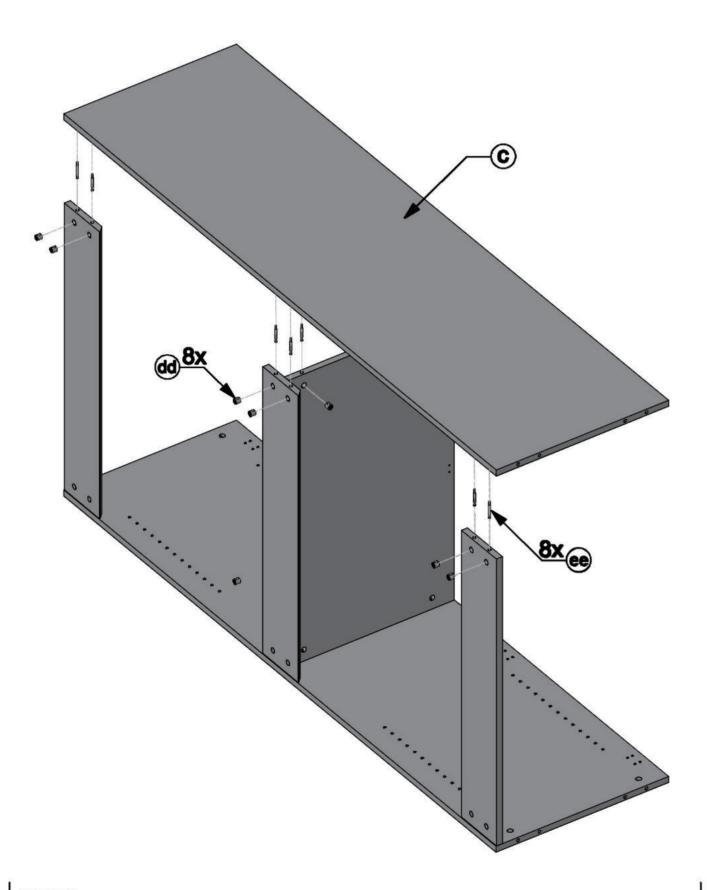


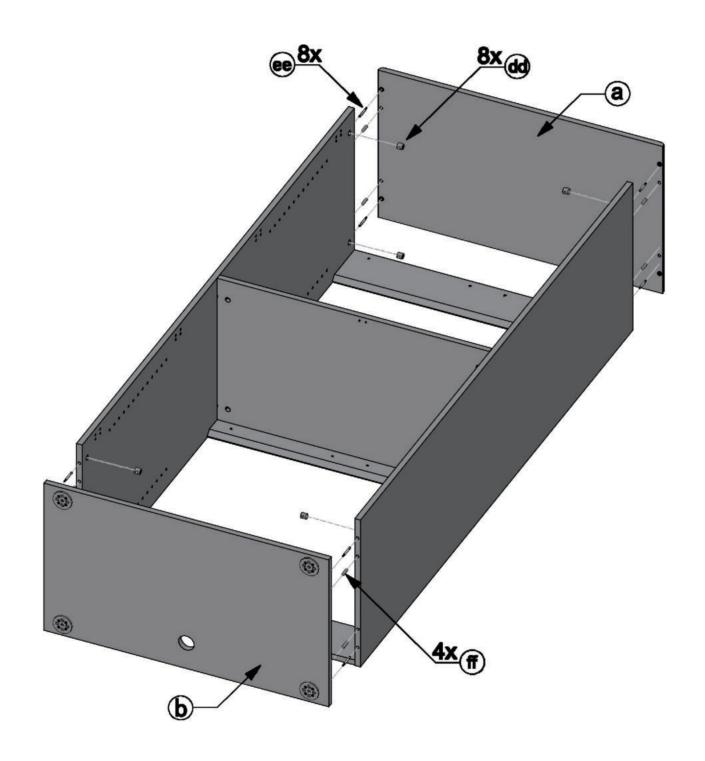


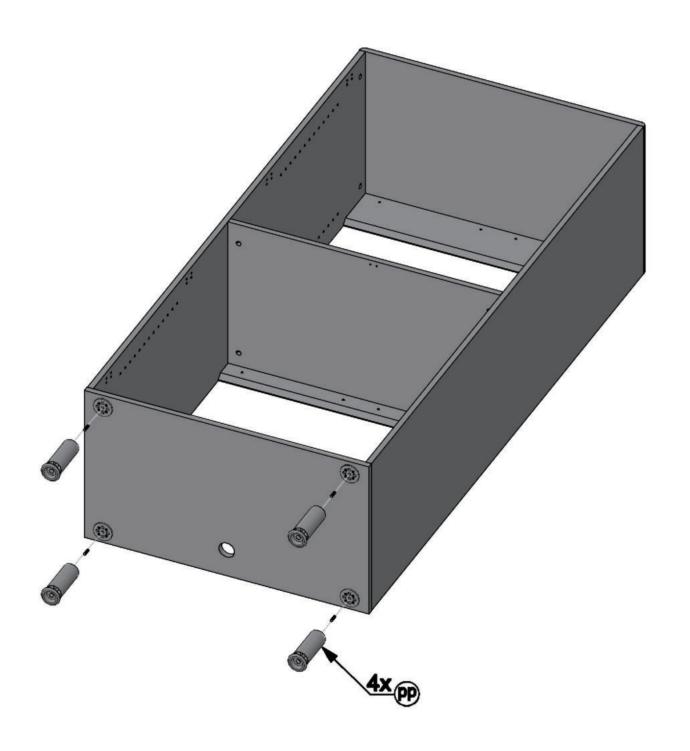

### STEP 5

NOTE: Cabinet is very heavy, careful! Have proper help to completely lift cabinet off all four (4) feet, as well, when putting cabinet down in place. Do not lift or tilt or brace cabinet when picking up/down on two (2) feet. Do not drag or slide cabinet at any time.

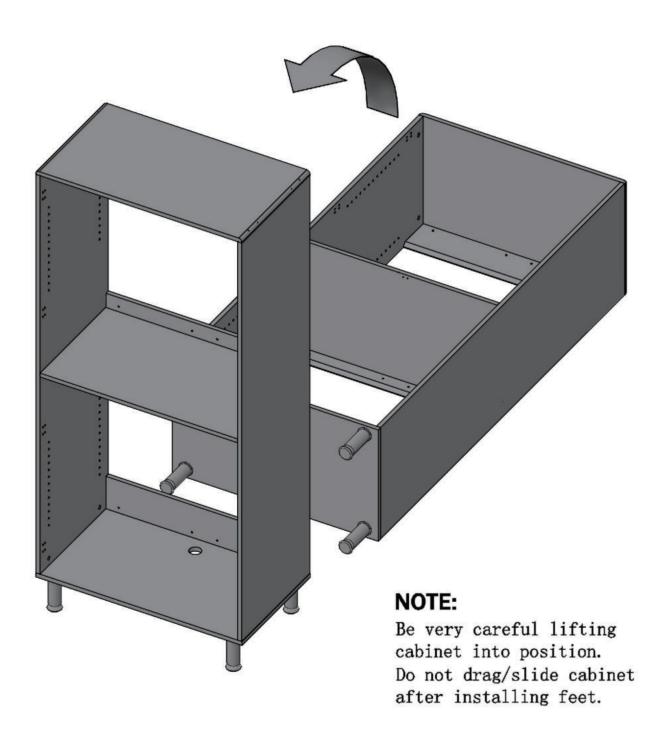


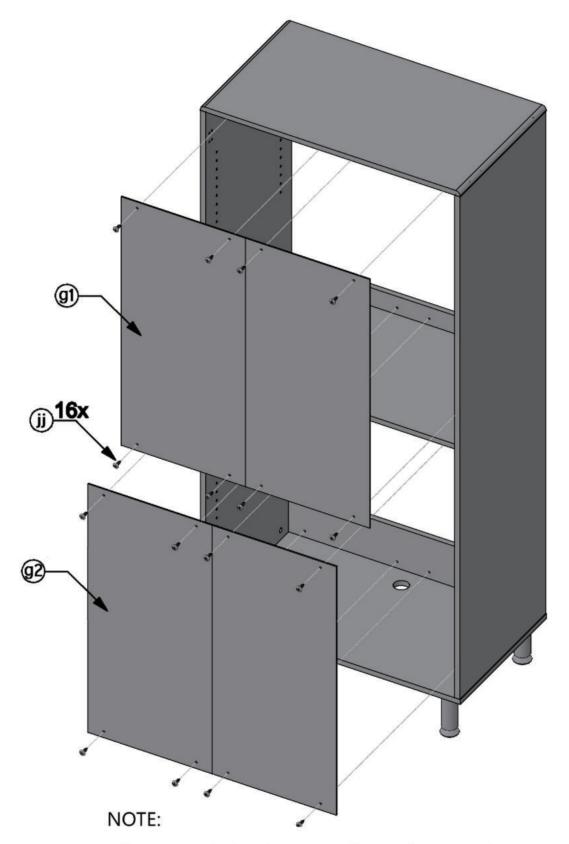



Align screw holes in Top Back Panel (g1) and Bottom Back Panel (g2) with screw holes in Back Spanners.

## STEP 7

NOTE: Installing Shelf and Doors after cabinet fully lifted off floor and set against wall in position will reduce weight when picking up cabinet. Get Enough Help.

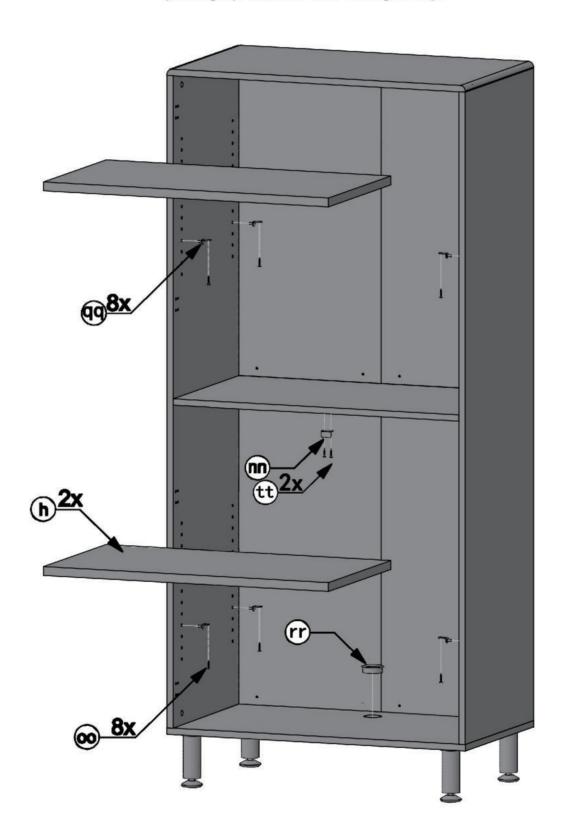

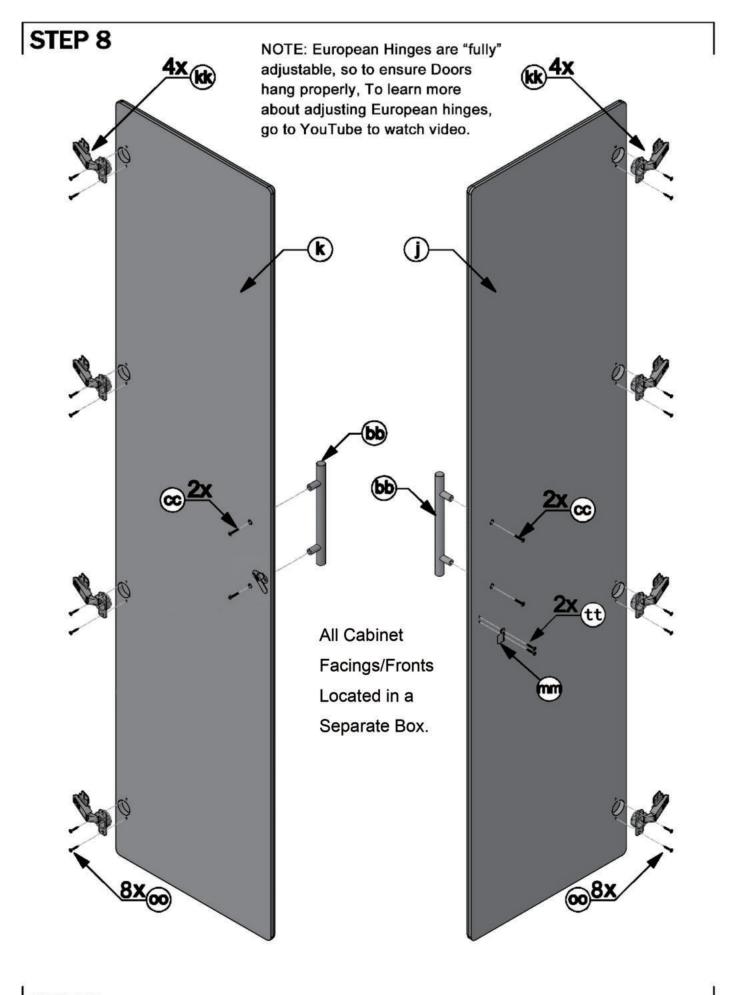

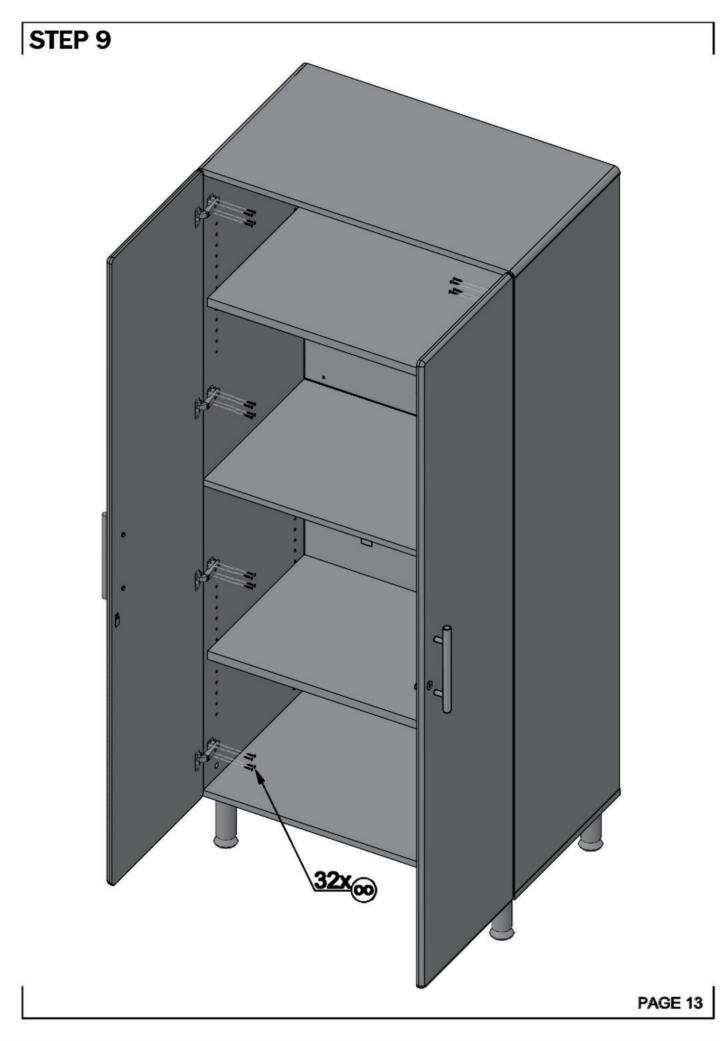

### STEP 10

NOTE: If Doors do not lock fully, refer in manual to page(s) showing assembling "Lock Hardware", and or, hinges require adjustment. If you do not want to adjust hinges, with Left Hand push both doors inward while turning key with Right Hand.



Thank you for your purchase of our award-winning products and visit us at: www.ulti-mategarage.com